




# DESIGN YOUR OWN SOLUTIONS

Custom upholstery to fit the style of your life


## 2042 Series

### Step 1: Select items

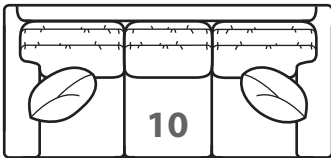

#### -10 Bungalow Sofa

Outside: 82W Inside: 64W  
COM: U

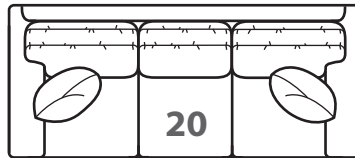


#### -20 Sofa

Outside: 88W  
Inside: 70W  
COM: V


#### -29 Queen Sleeper

Outside: 87W  
Inside: 69W  
COM: W

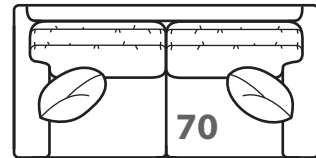


#### -70 Sofa

Outside: 76W Inside: 58W  
COM: T

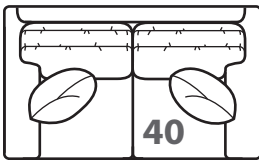

#### -40 Loveseat

Outside: 64W  
Inside: 46W  
COM: Q

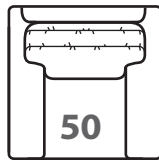

#### -50 Chair

Outside: 38W  
Inside: 20W  
COM: L




#### -56 Swivel Chair (Skirted Base Only)



#### -55 Ottoman


Outside: 17H 20D 26W  
COM: D

Order 2041-55

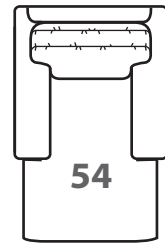

#### -54 Chaise

Outside: 67D 38W  
Inside: 49D 20W  
COM: O

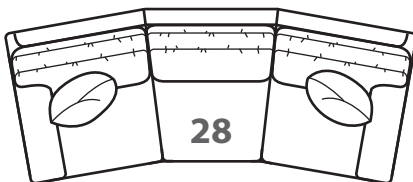

#### -28 Wedge Sofa

Outside: 103W  
Inside: 68W  
COM: W  
Wall Depth: 47"

### Step 2: Select base



(A) Skirted Base



(E) Tapered Leg



(F) Turned Leg

Scale: 1/4" = 1' All dimensions listed are approximate.

## 2042 Series

Overall Height	Overall Depth	Inside Depth	Arm Height	Seat Height	Seat Cushion
37	38	20	25	19	HR

Standard: Loose Pillow Back / 19" Throw Pillows

Number of standard throw pillows represented in illustration

Width measurements based on widest arm style, the Panel/Pleated/Sock Arm. Overall width is reduced with these arm options: Padded Track -2" per arm, Track & Modern Track -3" per arm. Seating area dimensions are not affected by arm choice.

### Step 3: Select arm



**Modern Track Arm**  
*Reduces outside width  
by 3" per arm*



**Padded Track Arm**  
*Reduces outside width  
by 2" per arm*



**Panel Arm**



**Pleated Arm**



**Sock Arm**



**Track Arm**  
*Reduces outside width  
by 3" per arm*

### Step 4: Select back



**Bed Pillow Back**



**Box Border Back**



**Knife Edge Back**



**Modern Box Border Back**