




DESIGN YOUR OWN SOLUTIONS

Custom upholstery to fit the style of your life


2051 Series

Step 1: Select items

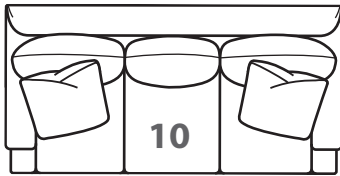


-10 Sofa

Outside: 84W
Inside: 69W
COM: T

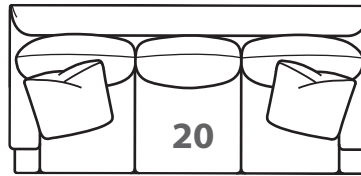


-20 Sofa

Outside: 90W
Inside: 75W
COM: V

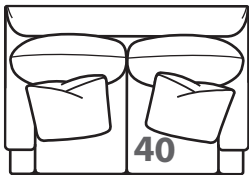


-40 Loveseat

Outside: 61W
Inside: 46W
COM: P

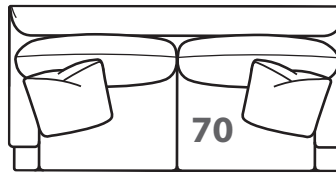

-70 Sofa

Outside: 84W
Inside: 69W
COM: T

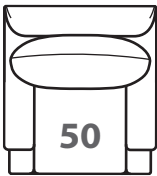

-56 Swivel Chair

(Skirted Base Only)



-55 Ottoman

Outside: 18.5H 23D 32W
COM: E

-50 Chair

Outside: 38W
Inside: 23W
COM: K

2051-20 Sofa shown with
(E) Tapered Leg, Sock
Arm, Bed Pillow Back



Scale: 1/4" = 1' All dimensions listed are approximate.

2051 Series

Overall Height	Overall Depth	Inside Depth	Arm Height	Seat Height	Seat Cushion
38	42	21	26	19	HR

Standard: Loose Pillow Back / 19" Throw Pillows

Number of standard throw pillows represented in illustration

Width measurements based on widest arm style, the Panel/Sock Arm. Overall width is reduced with this arm option: Sloped Arm -3" per arm. Seating area dimensions are not affected by arm choice.

Step 2: Select base



(A) Skirted Base



(E) Tapered Leg



(F) Turned Leg

Step 3: Select arm



Panel Arm



Sloped Arm

*Reduces outside width
by 3" per arm*



Sock Arm

Step 4: Select back



Bed Pillow Back



Box Border Back



Knife Edge Back